



*Internal Dimensions*

**Internal Facet size**


**1600**

Example P1400 enter 1400

**External Base Dimensions**

Ref: Exaco

ID: Melbourne P1600

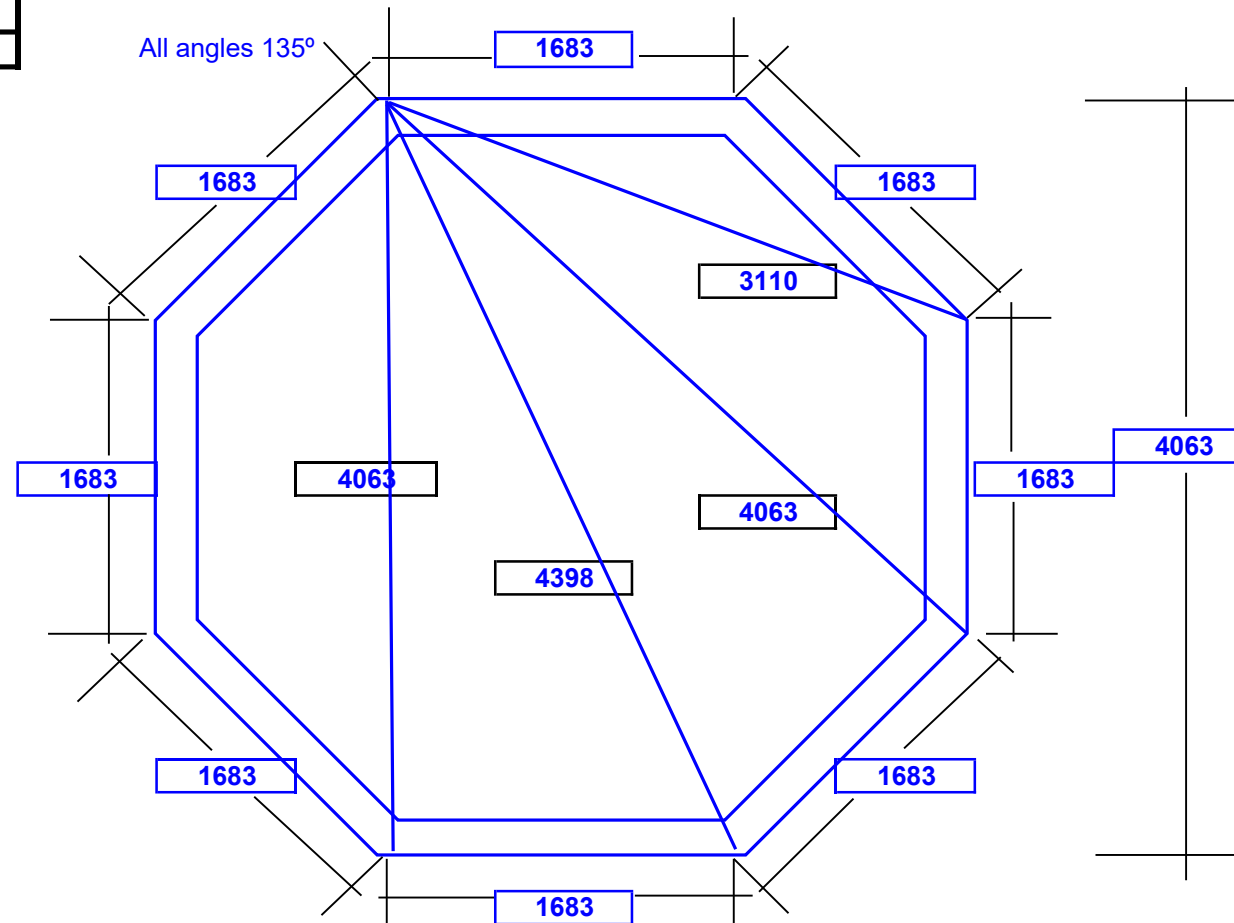

These are the **ONLY** sizes you should use to make your concrete base / slab.


Please note this is not necessarily the external sizes of the building. This is simply the size of the base pad.

In all garden building designs the sill will overhang the base (typically by 50mm on each facet)

# Internal Floor Dimensions

Ref

Exaco

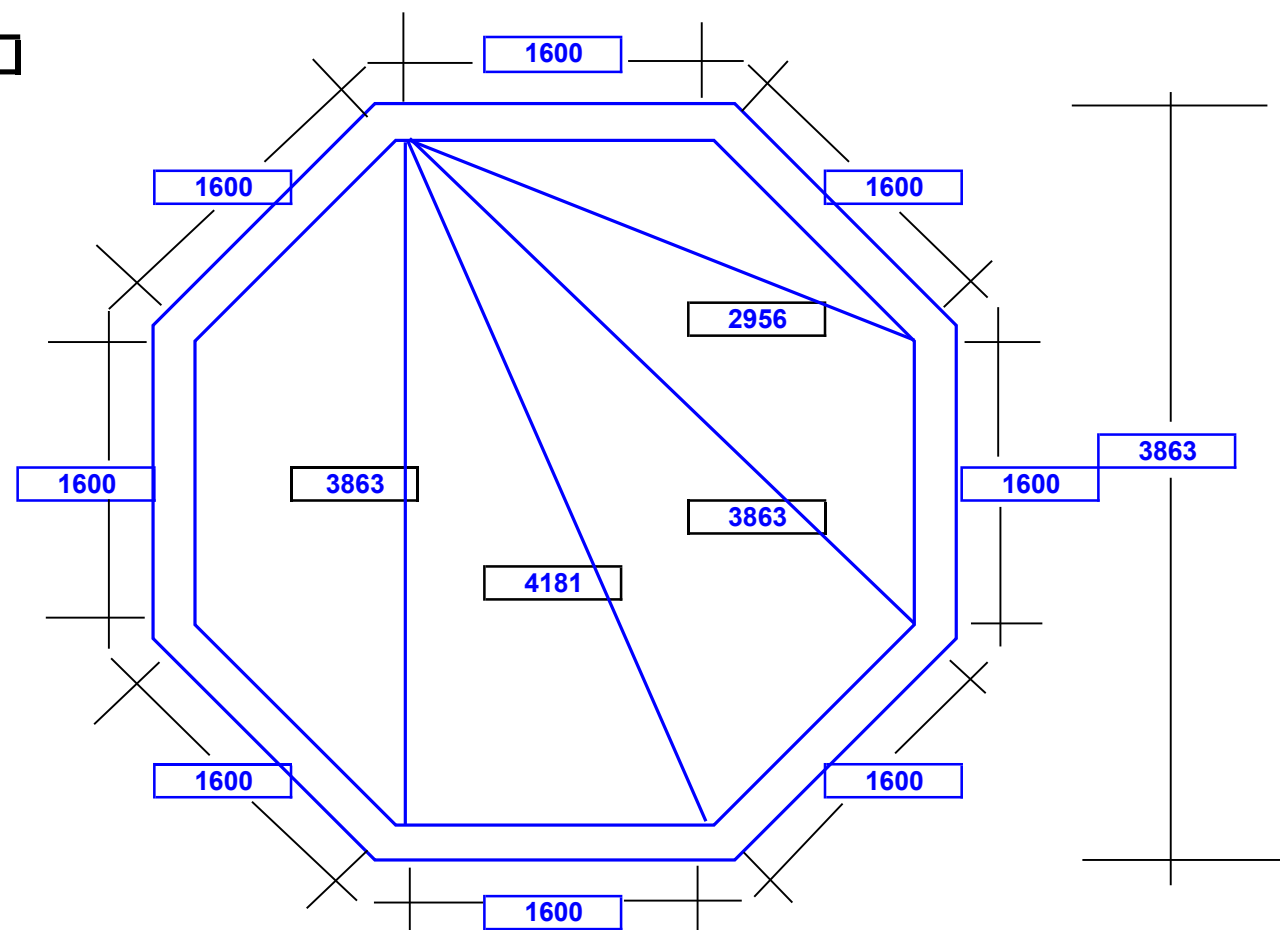

\*\* These are for reference only, to allow you to plan your furniture. **DO NOT USE THESE SIZES TO CREATE YOUR BASE**